


 


 

 
 





 

 

 





 


 
 



 


 
 



 

 
 
 

 

 


 
 

 

 


 



 







Original		Replacement		Original		Replacement	
	DVD Power		Power		<<		<<
	1		1		>>		>>
	2		2		Stop		Stop
	3		3		Play / Pause		Play
	4		4		Play / Pause		Pause
	5		5		I<<		I<<
	6		6		>>I		>>I
	7		7		Return		Back
	8		8		Step		Shift + Pause
	9		9		Clear		Shift + Exit
	0		0		Top Menu		Shift + Menu
	Open / Close		Exit		Top Menu		D. Menu
	Setup		Options		Display		Info
	Zoom		Eject		Menu		Menu
	3D Sound		3D		Up		Up
	Bookmark		Pre Ch		Left		Left
	Volume Con.		Guide		Enter		Ok



