 






 










 
 

 



 




 





 
 

 

 

 

 
 
 







 

 








 
 

 
 
 


Original	Replacement
 Standby Receiver	 Power
 Standby Source	 Shift + Power
 HDMI1	 Shift + 1
 HDMI2	 Shift + 2
 HMDI3	 Shift + 3
 HDMI4	 Shift + 4
 HDMI5	 Shift + 5
 V-AUX	 Shift + Smart
 AV1	 Shift + 6
 AV2	 Shift + 7
 AV3	 Shift + 8
 AV4	 Shift + 9
 AV5	 Shift + Guide
 AV6	 Shift + 0
 Audio1	 Shift + Options
 Audio2	 Shift + Dual
 Tuner	 Red

Original	Replacement
 USB	 Green
 NET	 Yellow
 Phono	 Blue
 Party	 Pre Ch
 HDMI Out	 Exit
 BD/DVD Scene	 List
 TV Scene	 Shift + TV/R
 NET Scene	 Shift + Media
 Radio Scene	 3D
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Menu
 Pop Up/Menu	 D. Menu
 On Screen	 Eject





Original	Replacement	Original	Replacement
	Option		Options
	Return		Back
	Display		Shift + Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Mode		Smart
	Stop		Stop
	Pause		Pause
	Play/Band		Play
	<< Tuning		<<
	>> Tuning		>>
	I<< Preset		I<<
	>>I Preset		>>I
	Movie		Text
	Music		Dual
	Sur Decode		Subt
	Straight		TV/R
	Info		Info
	Sleep		Sleep
	Enhancer		AV
	Pure Direct		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Original	Replacement	Original	Replacement
 +10/Memory	 Guide		
 ENT	 Media		







 
 





 
 

 















 
Original	Replacement
 Standby Receiver	 Power
 Standby Source	 Shift + Power
 HDMI1	 Shift + 1
 HDMI2	 Shift + 2
 HDMI3	 Shift + 3
 HDMI4	 Shift + 4
 HDMI5	 Shift + 5
 V-AUX	 Shift + Smart
 AV1	 Shift + 6
 AV2	 Shift + 7
 AV3	 Shift + 8
 AV4	 Shift + 9
 AV5	 Shift + Guide
 AV6	 Shift + 0
 Audio1	 Shift + Options
 Audio2	 Dual
 Tuner	 Red

Original	Replacement
 USB	 Green
 NET	 Yellow
 Phono	 Blue
 Party	 Pre Ch
 HDMI Out	 Exit
 BD/DVD Scene	 Text
 TV Scene	 AV
 NET Scene	 Format
 Radio Scene	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Menu
 Pop Up/Menu	 D. Menu
 On Screen	 Eject
 Option	 Options
 Return	 Back





Original	Replacement
 Display	 Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 Smart
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<
 Preset >>I	 >>I
 Info	 Info
 Sleep	 Sleep
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 Guide
 ENT	 Media

