













 













 









Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/--
	 0
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Fav / Marker / PC

Original	Replacement
	 Vol+
	 Audio / Lang I/II
	 CH+ / Page+
	 Vol-
	 Subtitle / EQ
	 CH- / Page-
	 Smart / List
	 D.Menu / Top
	 Info / Angle
	 AV / Input / RDS
	 Up
	 Display / Media
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original	Replacement
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Text/CC	<< / Tune-
<< / Text/CC	Text / Goto
Play/Pause /	Play / Slow
Play/Pause /	Pause / Step / Freeze
>> / Reveal	>> / Tune+
I<< / Hold	I<< / Preset-
I<< / Hold	Shift + Stop /
>>I / Size	>>I / Preset+
>>I / Size	Zoom / Size
Stop / Index	Stop / Hold
Aspect	Shift + Picture / Format
Freeze	Shift + Pause / Step / Freeze

Original	Replacement
Sleep	Sleep / Timer
T.Shift	TV/Radio /
USB	Shift + 8
EPG	Guide / EPG / -/-

