 










 


 



 






















 




 


 





 








 





 





Original	Replacement	Original	Replacement
 Power Receiver	 Power	 CD	 Shift + 3
 1	 1	 D.TUN	 Smart / List
 VCR / DVR	 Shift + 4	 Dimmer	 Shift + Mute / Dimmer
 2	 2	 0	 0
 CBL / SAT	 Shift + 0	 Sleep	 Sleep / Timer
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Vol+	 Vol+
 AUX	 Shift + 7	 CH-	 CH- / Page-
 5	 5	 Vol-	 Vol-
 Multi CH	 Shift + 1	 SP A/B	 Info / Angle
 6	 6	 Up	 Up
 DVD	 Shift + 2	 Muting	 Mute / Dimmer
 7	 7	 Left	 Left
 TAPE	 Shift + 5	 Enter	 OK
 8	 8	 Right	 Right
 TUNER	 Shift + 6	 Setup	 Setup / OPT /
 9	 9	 Down	 Down





Original	Replacement
 Return	 Back / Return
 Pause / Play Rev.	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-
 Listening Mode >	 Shift + >>I / Preset+
 Test Tone	 Red / Netflix / Search
 CH Sel	 Green / APP / Repeat
 Level-	 Yellow / YouTube / Repeat
 Level+	 Blue / Prime Video / Random
 Display	 Display / Media

Original	Replacement
 L.Night	 Menu / Home
 Cine FLTR	 D.Menu / Top





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR/12/Sleep	Sleep / Timer
CLR/12/Sleep	Exit / Cancel / Clear
Guide/Top	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home

Original	Replacement
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+





	Original	Replacement	Original	Replacement
	Audio	Audio / Lang I/II		
	Subtitle	Subtitle / EQ		
	Level-/Random	Blue / Prime Video / Random		
	Level+/Repeat	Green / APP / Repeat		
	Display	Display / Media		
	Play Mode VCR	Shift + 4		
	Play Mode DVD	Shift + 2		
	Play Mode HDD	Shift + 7		



 














 




 




















 




 

 

 

 



 








Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0	0
CLR/12/Sleep	Sleep / Timer
CLR/12/Sleep	Exit / Cancel / Clear
Disc/Album	CH+ / Page+
Vol+	Vol+
Disc/Album CH-	CH- / Page-

Original	Replacement
Vol-	Vol-
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Level-/Random	Blue / Prime Video / Random
Level+/Repeat	Green / APP / Repeat
Display	Display / Media





Original	Replacement
 Standby / On	 Power
 VCR/DVR	 4
 CBL/SAT	 0
 AUX	 7
 Multi CH	 1
 DVD	 2
 Tape	 5
 Tuner	 6
 CD	 3
 D.Tun	 Smart / List
 Dimmer	 Shift + Dimmer / Mute
 CLR / Sleep	 Sleep / Timer
 CLR / Sleep	 Exit / Cancel / Clear
 CH Disc	 CH+ / Page+
 Vol+	 Vol+
 CH Disc Album-	 CH- / Page-
 Vol-	 Vol-

Original	Replacement
 Up	 Up
 Muting	 Mute / Dimmer
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Rev. Play	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 I<< / Preset-
 Listening Mode >	 >>I / Preset+





Original		Replacement		Original		Replacement	
	Test Tone		Red / Netflix / Search				
	CH Sel		Green / APP / Repeat				
	Level-		Yellow / YouTube / Repeat				
	Level+		Blue / Prime Video / Random				
	Display		Display / Media				
	L.Night / Play Mode DVD		Menu / Home				
	Cine FLTR / Play Mode HDD		D.Menu / Top				

