





















 








 






 



 









 



















| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|-----------------------|---|-------------|---|---------------------------|
|  | Standby |  | Power |  | 8 |  | 8 |
|  | Auto / Eject |  | Eject / Surround |  | 9 |  | 9 |
|  | Mute |  | Mute / Dimmer |  | Input |  | AV / Input / RDS |
|  | P.Mode |  | Picture / Format |  | 0 |  | 0 |
|  | S.Mode |  | Sound / Title |  | Recall |  | Back / Return |
|  | Info |  | Info / Angle |  | Sleep |  | Sleep / Timer |
|  | Nicam |  | Audio / Lang I/II |  | Up |  | Up |
|  | 1 |  | 1 |  | Left |  | Left |
|  | 2 |  | 2 |  | Enter |  | OK |
|  | 3 |  | 3 |  | Right |  | Right |
|  | Menu |  | Menu / Home |  | Down |  | Down |
|  | 4 |  | 4 |  | CH- |  | CH- / Page- |
|  | 5 |  | 5 |  | CH+ |  | CH+ / Page+ |
|  | 6 |  | 6 |  | Vol- |  | Vol- |
|  | Exit / D.Setup |  | Setup / OPT / |  | Vol+ |  | Vol+ |
|  | Exit / D.Setup |  | Exit / Cancel / Clear |  | Text / Slow |  | Text / Goto |
|  | 7 |  | 7 |  | Text / Slow |  | Shift + Play / Slow |





| Original | Replacement |
|-------------------|--------------------------|
| Hold / Play/Pause | Play / Slow |
| Hold / Play/Pause | + Shift + Stop / |
| Hold / Play/Pause | Pause / Step / Freeze |
| Page+ / Stop | Stop / Hold |
| Page+ / Stop | + Shift + CH+ / |
| Page- / Zoom | Zoom / Size |
| Page- / Zoom | + Shift + CH- / |
| [≡i] / I<< | I<< / Preset- |
| [≡□] / >>I | >>I / Preset+ |
| [≡?] / <<< | <<< / Tune- |
| [≡●] / >>> | >>> / Tune+ |
| EPG / D.Menu | D.Menu / Top |
| EPG / D.Menu | Guide / EPG / -/-- |
| FAV / D.Title | + Shift + Sound / Title |
| FAV / D.Title | Fav / Marker / PC |
| FAV- / D.Disp | Display / Media |
| FAV- / D.Disp | + Shift + Down |

| Original | Replacement |
|--------------|-------------------------------|
| FAV+ / Goto | + Shift + Up |
| FAV+ / Goto | + Shift + Text / |
| Red / D.Prog | TV/Radio / |
| Red / D.Prog | Red / Netflix / Search |
| Green / Step | + Shift + Pause / Step / |
| Green / Step | Green / APP / Repeat |
| Yellow / RPT | + Shift + Green / APP / |
| Yellow / RPT | Yellow / YouTube / Repeat |
| Blue / A-B | + Shift + Yellow / YouTube / |
| Blue / A-B | Blue / Prime Video / Random |
| List / Angle | + Shift + Info / Angle |
| List / Angle | Smart / List |
| SUB-T | Subtitle / EQ |
| Aspect | + Shift + Picture / Format |
| Rec | Rec / Rec Mode |

