 




 
 


 


 




















 
 





	Original	Replacement		Original	Replacement
	Power		Power		Angle/TTX
	Goto		Back		Text
	Mute		Mute		Dual
	Source		AV		Media
	1		1		3D
	2		2		Stop
	3		3		Play
	4		4		Pause
	5		5		Format
	6		6		Options
	7		7		Up
	8		8		Down
	9		9		Right
	0		0		Left
	10+		Pre Ch		Enter
	Step		Smart		Yellow/Zoom
	Subtitle		Subt		Red/Menu
					Green





Original		Replacement		Original		Replacement	
	Blue		Blue				
	I<<		I<<				
	>>I		>>I				
	TV/Radio		TV/R				
	Repeat/Del		Shift + Text				
	Pro/EPG		Guide				
	Display		Info				
	<</FAV		<<				
	>>/Prot		>>				

