
















 



 







 







 



 










 



















Original		Replacement		Original		Replacement	
	Power		Power		4		4
	VIDEO		Red / Netflix / Search		5		5
	Sleep		Sleep / Timer		6		6
	Tuner Band		TV/Radio /		7		7
	P.Call Down		Shift + Down		8		8
	P.Call Up		Shift + Up		9		9
	Changer CD 1		Shift + 1		0		0
	Changer CD 2		Shift + 2		+10		Guide / EPG / -/-
	Changer CD 3		Shift + 7		I<<		I<< / Preset-
	Changer CD 4		Shift + 4		>>I		>>I / Preset+
	Changer CD 5		Shift + 8		Stop		Stop / Hold
	Changer CD 6		Shift + 9		Play/Pause		Play / Slow
	P		OK		Repeat		Green / APP / Repeat
	P.Open/Close		Eject / Surround		Clear		Exit / Cancel / Clear
	1		1		Check		Shift + OK
	2		2		Edit		Text / Goto
	3		3		P.Mode		Picture / Format





Original	Replacement
AI Auto Focus	Info / Angle
Up	Up
Presence	Setup / OPT /
AI/Loudness	Audio / Lang I/II
Left	Left
EQ.Effect	D.Menu / Top
Right	Right
Off	Shift + Mute / Dimmer
M.Call	Back / Return
Down	Down
Display	Display / Media
S.W.Power	Shift + Power
S.W.Effect	Shift + D.Menu / Top Menu
S.W.Vol-	Shift + Vol-
S.W.Vol+	Shift + Vol+
Mute	Mute / Dimmer
LD/AUX	AV / Input / RDS

Original	Replacement
Tape	Shift + 5
Tuner	Shift + 6
CD	Shift + 3
Volume Control -	Vol-
Volume Control +	Vol+
















 
 
 


Original	Replacement
Power ON/Off	Power
Mute	Mute / Dimmer
CD Play	Play / Slow
CD Pause	Pause / Step / Freeze
Stop	Stop / Hold
CD Rewind	<< / Tune-
CD F.FWD	>> / Tune+
Prev./Prog-	<< / Preset-
Next/Prog+	>> / Preset+
Tape 2 Pre./eq	Subtitle / EQ
Fm Mode/Disc	Eject / Surround
Edit	Zoom / Size
Sleep	Sleep / Timer
Program	TV/Radio /
Every Pop	D.Menu / Top
Funct./Direct	Setup / OPT /
Woofers/Speed	Text / Goto

Original	Replacement
Input/Source	AV / Input / RDS
Mode	Menu / Home
Tape 1 Preset	Up
CD/Theater	Info / Angle
Tape 1 Hall/Ats	Left
Center	OK
Tape 2 REC./Jazz	Right
Clear	Exit / Cancel / Clear
Preset Pause	Down
Volume+	Vol+
Band	Smart / List
Vol Rs+/S.Mode	CH+ / Page+
Volume-	Vol-
Display	Display / Media
Vol Rs-/Effect	CH- / Page-
Pr 1	1
Pr 2	2





Original	Replacement	Original	Replacement
Pr 3	 3		
Pr 4	 4		
Pr 5	 5		
Pr 6	 6		
Pr 7	 7		
Pr 8	 8		
Pr 9	 9		
+10/Next Sv+V	 Guide / EPG / -/--		
Pr 0/10	 0		
Repeat	 Green / APP / Repeat		
CD Random	 Blue / Prime Video / Random		
Tape 1 Play	 Shift + Play /		
Tape 1 Stop	 Shift + Stop /		
Tape 1 Rec	 Shift + Rec / Rec Mode		
Tape 1 Rew	 Shift + << /		
Tape 1 F.FWD	 Shift + >> /		

