










Original	Replacement	Original	Replacement
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [≡]	 Text / Goto







 







 





 

 



 



 



 





 

 



 
 
 

 















 





	Original	Replacement	Original	Replacement
	[≡☉]	 Subtitle / EQ		
	[/≡]	 Picture / Format		
	[≡X]	 Exit / Cancel / Clear		
	[≡⇕]	 Zoom / Size		
	[≡?]	 Display / Media		
	[≡i]	 Smart / List		





Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Up / P+	 Up	 +10	 Guide / EPG / -/-
 Up / P+	 CH+ / Page+	 0	 0
 Menu	 Menu / Home	 Repeat	 Green / APP / Repeat
 Left	 Left	 Search	 Red / Netflix / Search
 Select	 OK	 A→B	 Yellow / YouTube / Repeat
 Right	 Right	 Display	 Display / Media
 Down / P-	 CH- / Page-	 Audio	 Audio / Lang I/II
 Down / P-	 Down	 Subtitle	 Subtitle / EQ
 1	 1	 Zoom	 Zoom / Size
 2	 2	 Prog	 TV/Radio / PROGRAM
 3	 3	 C	 Blue / Prime Video / Random
 4	 4	 Angle	 Info / Angle
 5	 5	 Return	 Back / Return
 6	 6	 Time	 Sleep / Timer
 7	 7	 << / Tune-	 << / Tune-
 8	 8	 >> / Tune+	 >> / Tune+







































Original	Replacement	Original	Replacement
	 I<< / Preset-		
	 >>I / Preset+		
	 Play / Slow		
	 Pause / Step / Freeze		
	 Stop / Hold		
	 Sound / Title		
	 Eject / Surround		











Original	Replacement	Original	Replacement
On/Off	 Power		
Mute	 Mute / Dimmer		
Txt Stop	 Stop / Hold		
Tone+	 >> / Tune+		
Lang	 Sound / Title		
Menu audio	 Audio / Lang I/II		
Subt.List	 Subtitle / EQ		
Txt Expand	 Zoom / Size		
Sleep Timer	 Sleep / Timer		
Return TV	 TV/Radio /		
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Menu	 Menu / Home		
Menu Up	 Up		
Info	 Info / Angle		
Menu Left	 Left		
OK Enter	 OK		

Original	Replacement	Original	Replacement
Menu Right	 Right		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Display	 Display / Media		
Chan.Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		





Original	Replacement
Guide -/-- 1.	 Guide / EPG / -/--
0/10	 0
2.Fav P/C 2.	 Fav / Marker / PC
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Lang	 +  Shift + Audio / Lang I/II

Original	Replacement

