

 
 





















 








 


 


 










 
 



 

 
 


 

 


 


 
Original		Replacement		Original		Replacement	
	Standby/On		Power		Down		Down
	Rec		Rec		Right		Right
	1		1		Left		Left
	2		2		>>		>>
	3		3		<<		<<
	4		4		Menu		Menu
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		> </Still		Pause
	8		8		P+		Ch +
	9		9		P-		Ch -
	0		0		Mute		Mute
	Status/Exit		Exit		> /Index		Text
	Clear		Shift + Exit		Slow		AV
	Play		Play		System		Media
	Stop		Stop		Turbo Timer		Options
	Up		Up		SV/V+		Format





Original		Replacement		Original		Replacement	
	Audio		Dual				

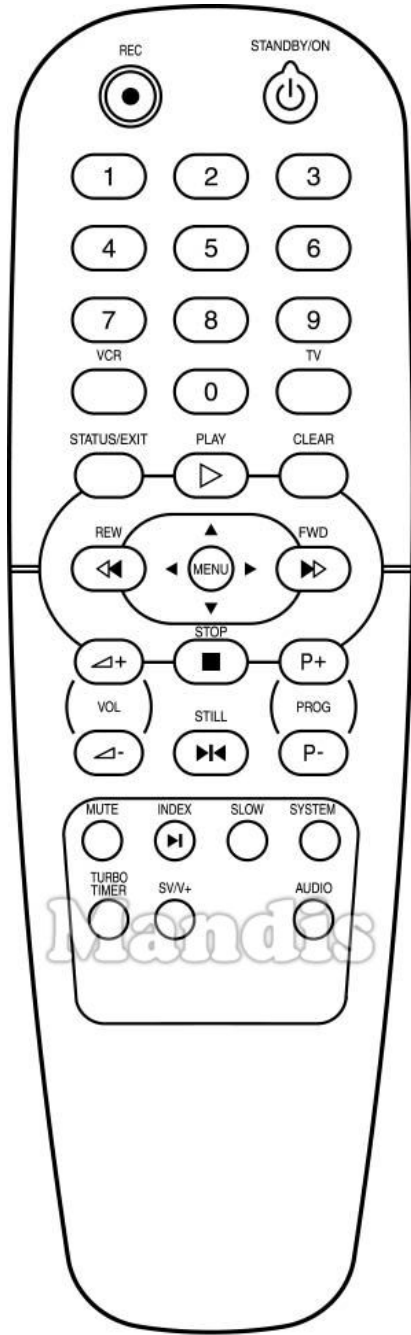

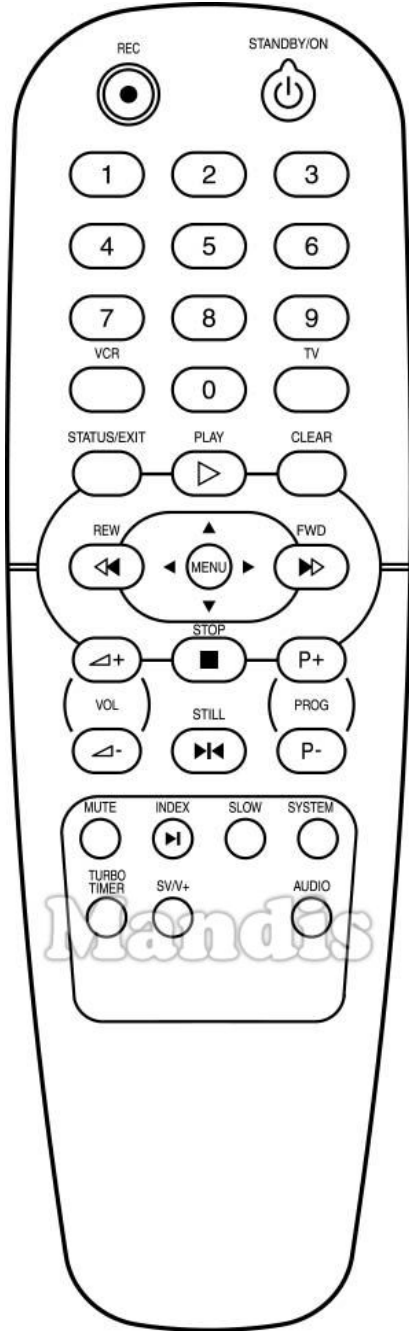

Original		Replacement		Original		Replacement	
	Standby/On		Power		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Mute		Mute
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Status/Exit		Exit				
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				

