









 




 

















 




Original	Replacement
 Power	 Power
 Mute	 Mute
 Tv/Radio	 TV/R
 Play	 Play
 Pause	 Pause
 FAV	 Pre Ch
 SAT	 Media
 TV/AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Recall	 Back
 Info	 Info
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Exit	 Exit
 Menu	 Menu
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Guide
 CH+	 Ch +
 CH-	 Ch -
 Red/Audio	 Red
 Red/Audio	 Dual



