



| Original | Replacement |
|----------|-------------------------|
| Power | Power |
| Input | Source |
| APA | Mode |
| Eco Mode | Aspect Eco / Aspect |
| Menu | Menu |
| Reset | Shift + Power |
| Up | Up |
| Left | Left |
| Enter | Enter |
| Right | Right |
| Down | Down |
| Return | Auto |
| Aspect | Shift + Aspect / Aspect |
| Keystone | Shift + Down |
| Keystone | Shift + Up |
| Pattern | Video Comp / Video |
| D Zoom+ | + / Play |

| Original | Replacement |
|----------|----------------------|
| D Zoom- | - / Stop |
| Vol+ | Vol + / Page + |
| Vol- | Vol - / Page - |
| Freeze | Freeze / Timer |
| Blank | Blank / Mute |
| Muting | Shift + Blank / Mute |

