






 


 








 

 



















	Original	Replacement		Original	Replacement
	Standby		Power		Up
	Default		Info		Down
	Mute		Mute		Menu
	iPod		Smart		Enter
	Aux		Media		
	Vol+		Vol +		
	Vol-		Vol -		
	l<<		l<<		
	l<<		<<		
	Play / Pause		Play		
	Play / Pause		Pause		
	>>l		>>l		
	>>l		>>		
	Bass+		Ch +		
	Bass-		Ch -		
	Treb+		Right		
	Treb-		Left		

