



Original	Replacement
On	Power
Off	+ Shift + Power
Mute	Mute / Dimmer
AVR	+ Shift + AV / Input / RDS
DVD	+ Shift + 2
> DVD	+ Shift + >> /
VID1	Smart / List
HDMI1	+ Shift + 1
Tape	+ Shift + 5
CD	+ Shift + 3
VID2	Display / Media
HDMI2	+ Shift + 6
AUX	+ Shift + 7
HDMI4	+ Shift + 4
HDMI3	+ Shift + 8
Sleep	Sleep / Timer
Preset ▲	CH + / Page+

Original	Replacement
Test	+ Shift + Text /
AM/FM	TV/Radio /
Vol+	Vol+
Preset ▼	CH- / Page-
OSD	+ Shift + Smart / List
Vol-	Vol-
CH./[≡?]	Info / Angle
Up	Up
SPKR/Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Digital/[≡X]	Setup / OPT /
Down	Down
Delay/Prev. CH.	Exit / Cancel / Clear
1	1
2	2



































 
Original	Replacement
	3
	4
	5
	6
	7
	8
	+ Shift + CH+ /
	9
	0
	D.Menu / Top
	+ Shift + Up
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	+ Shift + Down
	Sound / Title

Original	Replacement
	AV / Input / RDS
	+ Shift + Sleep / Timer
	I<< / Preset-
	>>I / Preset+
	Text / Goto
	<< / Tune-
	>> / Tune+
	Stop / Hold
	Pause / Step / Freeze































Original	Replacement	Original	Replacement
Power On		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
<<		<< / Tune-	
>>		>> / Tune+	
I<<		I<< / Preset-	
>>I		>>I / Preset+	
Night		Sleep / Timer	
Direct		D.Menu / Top	
[≡]		Text / Goto	
RDS		AV / Input / RDS	
SPKR/Menu		Menu / Home	
Up		Up	
Left		Left	
OK		OK	
Right		Right	

Original	Replacement	Original	Replacement
Clear		Exit / Cancel / Clear	
Down		Down	
Vol+		Vol+	
Mem/[≡◇]		Smart / List	
Vol-		Vol-	
CH./[≡?]		Display / Media	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Power Off	 + 	Shift + Power	















 

 







 

 

 
 
Original	Replacement	Original	Replacement
Power On		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Rec VCR		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
I<<		I<< / Preset-	
>>I		>>I / Preset+	
Power (On /Off)		Eject / Surround	
Direct		D.Menu / Top	
RDS		AV / Input / RDS	
SPKR/Menu		Menu / Home	
Delay/Prev. CH		Exit / Cancel / Clear	
Vol+ VCR		Vol+	
Mem/[≡◆]		Smart / List	
PR+ VCR		CH+ / Page+	

Original	Replacement	Original	Replacement
Vol- VCR		Vol-	
PR- VCR		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Preset ▲/Blue		Blue / Prime Video / Random	
Power Off		Shift + Power	
Play VCR		Shift + Play /	
Stop VCR		Shift + Stop /	
<< VCR		Shift + << /	

Tune-





Original	Replacement	Original	Replacement
>> VCR	 +  Shift + >> /		
Clear VCR	 +  Shift + Exit / Cancel / Clear		
Tun-M/[≡+]	 +  Shift + CH+ /		
1 VCR	 +  Shift + 1		
2 VCR	 +  Shift + 2		
3 VCR	 +  Shift + 3		
4 VCR	 +  Shift + 4		
5 VCR	 +  Shift + 5		
6 VCR	 +  Shift + 6		
7 VCR	 +  Shift + 7		
8 VCR	 +  Shift + 8		
9 VCR	 +  Shift + 9		
0 VCR	 +  Shift + 0		



