


 





 



 



 

 



 










 


 



 
 




 






 


 



 





 


 
 

 
 



 
 

 


 

 




Original		Replacement		Original		Replacement	
	Power		Power		P-		Ch -
	TV / DTV		Smart		AV		AV
	Guide		Guide		Mute		Mute
	Up		Up		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK		Ok		1		1
	Right		Right		2		2
	Down		Down		3		3
	Menu		Menu		4		4
	Back		Back		5		5
	Zoom		Eject		6		6
	O↔O	 + 	Shift + Dual		7		7
	Red		Red		8		8
	Green		Green		9		9
	Yellow		Yellow		0		0
	Blue		Blue		(i)		Info
	P+		Ch +		[≡]		Text





Original	Replacement	Original	Replacement
 [=i]	 SHIFT +  Shift + Info		
 [↑ ↓]	 ECO 3D 3D		
 [?]	 APP MEDIA Media		
 [□]	 Stop		
 TVRADIO TV / Radio	 SEARCH TV/R TV/R		
 CD/I/II I / II	 SOUND DUAL Dual		
 [⊕]	 SHIFT +  Shift + Subt		
 [...]	 AD SUBT Subt		

