



Original	Replacement	Original	Replacement
Power	Power	PC	Media
Source	AV	Mute	Mute
1	1	Vol+	Vol +
2	2	Vol-	Vol -
3	3	P+	Ch +
4	4	P-	Ch -
5	5	Menu	Menu
6	6	Exit	Exit
7	7	Up	Up
8	8	Down	Down
9	9	Right	Right
0	0	Left	Left
TV	GUIDE	Enter	Ok
CH.MGR	Pre Ch	[≡+]/PIP	3D
Sleep	Sleep	[≡?]/Info	Info
		[≡]/[/≡]/TTX/MIX	Text
		Red-/I/I-/P.Mode	Red

Original	Replacement	Original	Replacement
PC	Media	MUTE	MUTE
Mute	Mute	Vol +	Vol +
Vol+	Vol +	Vol -	Vol -
Vol-	Vol -	Ch +	Ch +
P+	Ch +	Ch -	Ch -
P-	Ch -	Menu	Menu
Menu	Menu	Exit	Exit
Exit	Exit	Up	Up
Up	Up	Down	Down
Down	Down	Right	Right
Right	Right	Left	Left
Left	Left	Enter	Ok
Enter	Ok	ECO	3D
ECO	3D	DISPLAY	Info
DISPLAY	Info	REPEAT	Text
REPEAT	Text	A	Red
Text	Red		





Original		Replacement		Original		Replacement	
	Green/-I-/S. Mode		Green				
	Yellow/Still		Yellow				
	Blue/P.Size		Blue				
	[≡◇]/Source		Shift +				
	[≡◇]/Swap		AV				
	Size		Options				
	I-II/Dual		Format				
	(o)/SRS		Dual				
	[←]/Position		Subt				
	P Up		Smart				
	P Down		>>				
			<<				

