




 



 

















 











Original	Replacement
 On/Off	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Picture	 Format

Original	Replacement
 Sound	 Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 FAV	 Shift + Pre Ch
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 TV	 TV/R





Original	Replacement	Original	Replacement
 YouTube	 Media		
 Netflix	 Smart		
 Net+	 Shift + Media		
 Rec/DVD Menu	 Rec		
 I<<	 I<<		
 >>I	 >>I		
 Stop	 Stop		
 <<	 <<		
 >>	 >>		
 Play	 Play		
 Pause	 Pause		
 Rec List/DVD	 List		
 Red/Goto	 Red		
 Green/A-B	 Green		
 Yellow/Angle	 Yellow		
 Blue/Repeat	 Blue		

