


 


 



Original		Replacement		Original		Replacement	
	Power DVD		Power		CH-		Ch -
	Direct Tv Rec		TV/R		ShowView		Blue
	Drive Select HDD		Media		Manual Skip		Subt
	Drive Select DVD		Smart		⏮ Skip		I<<
	1		1		Skip ⏭		>>I
	2		2		◀ Slow/Search		<<
	3		3		Slow/Search ▶		>>
	4		4		■ Stop		Stop
	5		5		⏸ Pause		Pause
	6		6		▶ Play/x1.3		Play
	7		7		Direct Navigator/Top		Menu
	8		8		Functions		Options
	9		9		Sub Menu		D. Menu
	0		0		Return		Back
	* Cancel		Guide		Up		Up
	Input Select		AV		Down		Down
	CH+		Ch +		Right / ▶		Right





Original	Replacement
 Left / 	 Left
 Enter	 Ok
 Prog/Check	 Sleep
 Display	 Info
 Status	 3D
 Time Slip	 Format
 Timer	 Shift + AV
 Erase	 Exit
 Rec Mode	 Shift + Rec
 Rec	 Rec
 (A) Ext Link	 Red
 (B) Dubbing	 Green
 (C) Create Chapter	 Yellow
 Audio	 Dual
 Power Tv	 Shift + Power
 AV Tv	 Eject
 CH+ Tv	 Shift + Ch +

Original	Replacement
 CH- Tv	 Shift + Ch -
 Volume+ Tv	 Vol +
 Volume- Tv	 Vol -

