 


 
 

 



 
 
 
 


 


 
 
 

 
 




 






 









 
 

 

 


 



 











Original	Replacement	Original	Replacement
 STB POWER	 Power	 YELLOW /	 Dual
 TV Power	 Shift + Power	 BLUE / LIST	 Blue
 1	 1	 BLUE / LIST	 List
 2	 2	 OPTION	 Options
 3	 3	 INFO	 Info
 4	 4	 UP	 Up
 5	 5	 LEFT	 Left
 6	 6	 OK	 Ok
 7	 7	 RIGHT	 Right
 8	 8	 DOWN	 Down
 9	 9	 MUTE	 Mute
 0	 0	 FAV	 Shift + Pre Ch
 LAST	 Pre Ch	 GUIDE	 Guide
 RED / IP	 Red	 BACK	 Back
 GREEN / SLEEP	 Green	 REC	 Rec
 GREEN / SLEEP	 Sleep	 STOP	 Stop
 YELLOW /	 Yellow	 TIME SHIFT	 Smart



AUDIO



Original	Replacement	Original	Replacement
	MEDIA		Media
	REW		<<
	PLAY / PAUSE		Play
	PLAY / PAUSE		Pause
	FWD		>>
	VOL+		Vol +
	VOL-		Vol -
	PAGE UP	+	Shift + Ch +
	PAGE DOWN	+	Shift + Ch -
	PR+		Ch +
	PR-		Ch -
	ZOOM		Eject
	V. FORMAT		Format
	TEXT		Text
	TV/Radio		TV/R
	Menu		Menu
	TIMER		AV

