
















 





 








 



 



 


 

 


 
























Original	Replacement	Original	Replacement
 Power	 Power	 Timer Date+	 Shift + Right
 OSD	 Info	 Timer Date-	 Shift + Left
 I<< / Index-	 I<<	 Timer On+	 Shift + Vol +
 >>I / Index+	 >>I	 Timer On-	 Shift + Vol -
 Play	 Play	 Timer Off+	 Shift + Ch +
 << REW	 <<	 Timer Off-	 Shift + Ch -
 FF >>	 >>	 Timer Check	 Shift + Menu
 Stop	 Stop	 Timer Cancel	 Shift + Exit
 Pause / Still	 Pause	 Timer Rec	 Shift + Rec
 Slow	 Shift + Play	 Display	 Shift + Info
 Rec	 Rec	 Reset	 Back
 Tracking+ /	 Ch +	 Zero Stop	 Shift + 0
 Tracking- /	 Ch -	 Audio Out	 Dual
 ^	 Vol +	 1	 1
 v	 Vol -	 2	 2
 ^	 Shift + Up	 3	 3
 v	 Shift + Down	 4	 4





	Original	Replacement		Original	Replacement
	5		5		Store
	6		6		Smart
	7		7		Input Select
	8		8		
	9		9		
	0		0		
	Video Plus+		Pre Ch		
	-/--		Guide		
	Up		Up		
	Left		Left		
	Menu		Menu		
	Menu		Ok		
	Right		Right		
	Down		Down		
	Recording LP SP		Media		
	Exit		Exit		



