





 
 

 
 



 








 

 
 












 


 

 














Original	Replacement	Original	Replacement
	Left		Deck <
	Muting		Deck >
	CD Play		Down
	CD Pause		Master Vol+
	CD Stop		CH Select
	CD <<		Tuner Channel+
	CD >>		Master Vol-
	CD I<<		Tuner Channel-
	CD >>I		TV/DBS
	T.Tone		DVD/VDP
	PHONO		CD
	Surround		VCR
	Mode		MD / TAPE MON
	System Setup		TUNER
	AVR/AVC		TUNER
	Menu Next		Deck A/B
	Menu Up		Deck Stop
	Shift + Left		Left
	Mute / Dimmer		Right
	Play / Slow		Down
	Pause / Step / Freeze		Vol+
	Stop / Hold		Smart / List
	<< / Tune-		CH+ / Page+
	>> / Tune+		Vol-
	I<< / Preset-		CH- / Page-
	>>I / Preset+		1
	Sound / Title		2
	Audio / Lang I/II		3
	Eject / Surround		4
	D.Menu / Top		5
	Setup / OPT /		6
	AV / Input / RDS		9
	Menu / Home		Yellow / YouTube / Repeat
	Up		Shift + Stop / Hold




























































 

 








Original	Replacement	Original	Replacement
AVR/AVC	AV / Input / RDS	DVD I<<	I<< / Preset-
Power VCR	Power	DVD Pause	Pause / Step / Freeze
Power DVD	Shift + Power	DVD >>I	>>I / Preset+
PHONO	Shift + Sound / Title	DVD Display	Display / Media
CD	3	DVD Stop	Stop / Hold
DVD/VDP	2	DVD Return	Back / Return
TV/DBS	1	DVD Setup	Setup / OPT /
VCR	4	Up	Up
MD / TAPE MON	5	Select	OK
TUNER	9	Master Vol+	Vol+
TUNER	6	Left	Left
Tuner Shift	Shift + 6	Down	Down
Tuner Channel+	CH+ / Page+	Right	Right
Tuner Channel-	CH- / Page-	Master Vol-	Vol-
DVD Title	Sound / Title	T.Tone	Audio / Lang I/II
DVD Play	Play / Slow	Video Select	Shift + 4
DVD Menu / Guide	Menu / Home	Mode	D.Menu / Top





Original	Replacement	Original	Replacement
Muting	 Mute / Dimmer	Deck >	 Right
MD Play	 Play / Slow	Menu Down	 Down
MD Pause	 Pause / Step / Freeze	Master Vol+	 Vol+
Deck Stop	 Stop / Hold	CH Select	 Smart / List
Deck <<	 << / Tune-	Tuner Channel+	 CH+ / Page+
Deck >>	 >> / Tune+	Master Vol-	 Vol-
MD I<<	 I<< / Preset-	Tuner Channel-	 CH- / Page-
MD >>I	 >>I / Preset+	TV/DBS	 1
T.Tone	 Sound / Title	DVD/VDP	 2
PHONO	 Audio / Lang I/II	CD	 3
Surround	 Eject / Surround	VCR	 4
Mode	 D.Menu / Top	MD / TAPE MON	 5
System Setup	 Setup / OPT /	TUNER	 6
AVR/AVC	 AV / Input / RDS	TUNER	 9
Menu Next	 Menu / Home	Deck A/B	 Yellow / YouTube / Repeat
Menu Up	 Up	MD Stop	 Shift + Stop /
Deck <	 Left	MD <<	 Shift + << /

Original	Replacement	Original	Replacement
Deck >	 Right	Deck >	 Right
Menu Down	 Down	Deck <<	 << / Tune-
Master Vol+	 Vol+	Deck >>	 >> / Tune+
CH Select	 Smart / List	MD I<<	 I<< / Preset-
Tuner Channel+	 CH+ / Page+	MD >>I	 >>I / Preset+
Master Vol-	 Vol-	T.Tone	 Sound / Title
Tuner Channel-	 CH- / Page-	PHONO	 Audio / Lang I/II
TV/DBS	 1	Surround	 Eject / Surround
DVD/VDP	 2	Mode	 D.Menu / Top
CD	 3	System Setup	 Setup / OPT /
VCR	 4	AVR/AVC	 AV / Input / RDS
MD / TAPE MON	 5	Menu Next	 Menu / Home
TUNER	 6	Menu Up	 Up
TUNER	 9	Deck <	 Left
Deck A/B	 Yellow / YouTube / Repeat	MD <<	 Shift + << /
MD Stop	 Shift + Stop /		
MD <<	 Shift + << /		

Tune-



