


 




 
 
 



 

 


 



 





 



 

 



Original	Replacement	Original	Replacement
	Power		Power
	FAV		Pre Ch
	Mute		Mute
	EPG		Guide
	Back		Back
	Next >		>>I
	Help		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Replacement	Original	Replacement
	Text		Text
	< Prev		I<<
	Radio		TV/R
	TV		Smart
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green





	Original	Replacement	Original	Replacement
	Yellow	 C		
	Blue	 D		
	<<			
	>>			
	Play / Pause	 PLAY MODE		
	Play / Pause			
	Stop			
	Rec	 REC MODE		
	Info	 DISPLAY INFO		
	Timer	 TIMER AV		
	Web	 APP MEDIA		
	Plugin	 SETTINGS OPT		
	Audio	 SOUND DUAL		
	Subtitle	 AD SUBT		
	Sleep	 PROG SLEEP		

