
 
 




 

 






 



 
 


 

 

 
 







Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Reveal	 Smart	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Store Text	 Shift + Text
9	 9	Disp	 3D
Guide -/-- 1.	 Guide	4.# 16:9	 Format
0/10	 0	Contrast+	 Shift + Ch +
2.Fav P/C 2.	 Pre Ch	Contrast-	 Shift + Ch -
Red	 Red	3.*	 Shift + Guide
Green	 Green	Surround	 Shift + Red
Mix Scan	 List	Nicam/Mono	 Shift + Green
On/Tim	 Options	Level L	 Shift + Yellow
Bright+ Mode	 >>	Level R/Woofer	 Shift + Blue
Bright- Sys	 <<		
Yellow	 Yellow		
Blue	 Blue		
Color+ P.Std	 Shift + Format		
Color- S.Std	 Shift + Dual		
Audio+	 Shift + Vol +		
Tone-	 Shift + Vol -		

