
 

 












 

 

 

 

 

 








 
 




 
 
 

 
 
Original	Replacement
	 Power
	 Mute
	 Info
	 Options
	 Shift + Format
	 Shift + Dual
	 AV
	 Guide
	 >>
	 <<
	 Pre Ch
	 Menu
	 Format
	 Dual
	 Exit
	 Vol -
	 Vol +

Original	Replacement
	 Up
	 Left
	 Ok
	 Right
	 Down
	 Ch -
	 Ch +
	 Red
	 Shift + Left
	 Green
	 Shift + Down
	 Yellow
	 Shift + Up
	 Blue
	 Shift + Right
	 1
	 2




 


 

 

 

 





 

 

 
 

 


 

 







Original		Replacement	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	10+		Shift + Guide
	USB/CR / Text		Media
	USB/CR / Text		Text
	Play/Pause / Index		Play
	Play/Pause / Index		Shift + Info
	Play/Pause / Index		Pause
	Stop / Cancel		Stop
	Stop / Cancel		Shift + Exit

Original		Replacement	
	SUBTL		Subt
	Prog / Mix		Smart
	Prog / Mix		Shift + Sleep
	Return / SUBPG		Back
	Repeat / Reveal		Shift + Text
	Search / Hold		TV/R





Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

