






















 














Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide
 Smart/Colors	 Shift + Smart
 Home	 Smart
 CH+	 Ch +
 CH-	 Ch -

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 Info	 Info
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 left	 Left
 OK	 Ok
 Netflix	 Shift + Media
 Prime Video	 Format
 You Tube	 Media
 Google Play	 3D
 MTS	 Options





Original	Replacement	Original	Replacement
 Text	 Text		
 Sub	 Subt		
 TV	 TV/R		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Stop	 Stop		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

