 
 
 





 





 

 

 

 
 
 

 

 

 
 
 






	Original	Replacement	Original	Replacement
	Power			
	USB			
	SD			
	AUX			
	BT			
	FM			
	Mute			
	Auto Scan			
	Mem+			
	Mem-			
	>>I/Next			
	Right			
	I<</Prev			
	Left			
	Play / Pause			
	Pause			
	Play	