



Original	Replacement	Original	Replacement
	Power		Ch -
	Open/Close		Ch +
	Display		Shift + AV
	1		Guide
	2		Yellow
	3		Menu
	4		Shift + Menu
	5		Options
	6		TV/R
	7		Blue
	8		Pause
	9		Stop
	0		>>
	Source		>>
	Tv (Mode)		<<
	Video Plus+		<<
	CH +		Rec
			Text





Original		Replacement		Original		Replacement	
	Copy		3D				
	Audio		Dual				
	Angle		Red				
	Subtitle		Subt				
	HDD/DVD		Green				
	Play		Play				
	Down		Down				
	Enter		Ok				
	Right		Right				
	Up		Up				
	Left		Left				

