

 

 

 


 

 

 
 
 


 
 

 

 

 

 

 
 




 
 
 






 
 
 



 




Original	Replacement
 Power	 Power
 Eject	 Eject
 Tv/Disc	 TV/R
 ATV/DTV	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AD	 Shift + Subt
 Input	 AV
 Mute	 Mute

Original	Replacement
 Quick	 Pre Ch
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Pop Up Menu	 D. Menu
 Top Menu	 Shift + Menu
 Guide/Disc	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu/Set Up	 Menu
 Return	 Back
 Pause	 Pause





Original		Replacement	
	Play		Play
	Stop		Stop
	I<< Skip		I<<
	<< Rev		<<
	>> FF		>>
	Skip >>I (Slow)		>>I
	Red/Program		Red
	Green/Digest		Green
	Yellow/Zoom		Yellow
	Blue/Book Mark		Blue
	[≡?]		Media
	[≡+]		Format
	[≡◆]		3D
	[≡o]/[≡x]		Sleep
	[▼]		Options
	Text		Text
	Subtitle		Subt

Original		Replacement	
	O)/I		Dual
	[≡i]/[i+]		Info
	Angle		Rec

