




 



































 







 







 

 




 
 
 







 














 
 







	Original	Replacement		Original	Replacement
	Power	 Power		7	 7
	[ + ]	 Info		8	 8
	Tv/AV	 AV		9	 9
	Mute	 Mute		0	 0
	^	 Ch +		-/--	 Guide
	v	 Ch -		Timer	 Shift + AV
	Vol+	 Vol +		N	 Media
	Vol-	 Vol -		Menu	 Menu
	V	 Ok		Mood Light	 Format
	V+	 Right		Red	 Red
	V-	 Left		Green	 Green
	1	 1		Yellow	 Yellow
	2	 2		Blue	 Blue
	3	 3		Power VCR	 Shift + Power
	4	 4		Audio Out VCR	 Dual
	5	 5		^ VCR	 Up
	6	 6		v VCR	 Down





Original	Replacement	Original	Replacement
 Stop	 Stop	 [≡↓]	 Exit
 Pause	 Pause	 [∴]	 Subt
 II>	 Back		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Rec	 Rec		
 Tv/TXT	 Text		
 F.P.	 Pre Ch		
 [ /≡]	 Options		
 [≡ ←]	 Eject		
 [≡?]	 TV/R		
 [≡◇]	 3D		
 [≡i]	 List		
 [≡+]	 D. Menu		
 [≡o]	 Smart		
 [≡x]	 Sleep		

