




 







































 



 



 





 






 







 

 






 
















Original	Replacement	Original	Replacement
 Power	 Power	 7	 7
 [+]	 Info	 8	 8
 Tv/AV	 AV	 9	 9
 Mute	 Mute	 0	 0
 ^	 Ch +	 -/--	 Guide
 v	 Ch -	 Timer	 Shift + AV
 Vol+	 Vol +	 N	 Media
 Vol-	 Vol -	 Menu	 Menu
 V	 Ok	 Mood Light	 Format
 V+	 Right	 Red	 Red
 V-	 Left	 Green	 Green
 1	 1	 Yellow	 Yellow
 2	 2	 Blue	 Blue
 3	 3	 Power VCR	 Shift + Power
 4	 4	 Audio Out VCR	 Dual
 5	 5	 ^ VCR	 Up
 6	 6	 v VCR	 Down





Original	Replacement	Original	Replacement
 Stop	 Stop	 [≡↓]	 Exit
 Pause	 Pause	 [∴]	 Subt
 II>	 Back		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Rec	 Rec		
 Tv/TXT	 Text		
 F.P.	 Pre Ch		
 [/≡]	 Options		
 [≡ ←]	 Eject		
 [≡?]	 TV/R		
 [≡◇]	 3D		
 [≡i]	 List		
 [≡+]	 D. Menu		
 [≡o]	 Smart		
 [≡x]	 Sleep		

