




 



































 







 







 

 




 
 
 








 



















 







	Original	Replacement		Original	Replacement
	Power	 Power		7	 7
	[+]	 Info		8	 8
	Tv/AV	 AV		9	 9
	Mute	 Mute		0	 0
	^	 Ch +		-/--	 Guide
	v	 Ch -		Timer	 Shift + AV
	Vol+	 Vol +		N	 Media
	Vol-	 Vol -		Menu	 Menu
	V	 Ok		Mood Light	 Format
	V+	 Right		Red	 Red
	V-	 Left		Green	 Green
	1	 1		Yellow	 Yellow
	2	 2		Blue	 Blue
	3	 3		Power VCR	 Shift + Power
	4	 4		Audio Out VCR	 Dual
	5	 5		^ VCR	 Up
	6	 6		v VCR	 Down





Original	Replacement	Original	Replacement
	Stop		[≡⇕] Exit
	Pause		[∴] Subt
	>		Back
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Tv/TXT		Text
	F.P.		Pre Ch
	[/≡]		Options
	[≡ <]		Eject
	[≡?]		TV/R
	[≡◇]		3D
	[≡i]		List
	[≡+]		D. Menu
	[≡o]		Smart
	[≡x]		Sleep

