

 

 
 











| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Zoom |  Zoom / Size |
|  SUB |  Subtitle / EQ |
|  Timeshift |  Shift + Sleep / Timer |
|  USB |  Shift + 8 |
|  TV/Radio |  TV/Radio / |
|  TXT |  Text / Goto |
|  PVRLIST |  Smart / List |
|  Sleep |  Sleep / Timer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |

| Original | Replacement |
|---|---|
|  Rec |  Rec / Rec Mode |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  EPG |  Guide / EPG / -/- |
|  Down |  Down |
|  Info |  Info / Angle |
|  I<< |  I<< / Preset- |
|  Audio |  Audio / Lang I/II |
|  << |  << / Tune- |
|  >>I |  >>I / Preset+ |
|  SAT |  Shift + 0 |
|  >> |  >> / Tune+ |
|  1 |  1 |





| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

