





 





 












 










 





 

 



 

 






Original	Replacement	Original	Replacement
	Power		Power
	Open / Close		Eject
	Card / USB		Media
	Subtitle		Subt
	Disc		Smart
	Language		Dual
	DVD / DVB		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Repeat		Text
	A-B		D. Menu
	Zoom		Shift + Eject
	Setup		Options
	PBC		TV/R
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Title		List
	Menu		Menu
	Pause		Pause
	Slow		Shift + Play
	Resume		Shift + Stop
	<<		<<





Original	Replacement	Original	Replacement
	 >>		
	 Play		
	 I<<		
	 >>I		
	 Stop		
	 3D		
	 Vol +		
	 Vol -		
	 Mute		
	 +  Shift + Pause		
	 INFO Info		
	 PRE-CH Pre Ch		
	 SLEEP Sleep		
	 EXIT Exit		
	 RETURN BACK Back		

