



 




 
 

 



 

 



















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Freeze	 Pause / Step / Freeze
 0	 0

Original	Replacement
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK / Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Home	 Shift + Menu /
 Vol+	 Vol+





	Original	Replacement
	CH-	CH- / Page-
	Mouse	Smart / List
	Vol-	Vol-
	<< / Text	<< / Tune-
	<< / Text	Text / Goto
	>> / Hold	+  Shift + Stop /
	>> / Hold	>> / Tune+
	<< / Mix	<< / Preset-
	<< / Mix	+  Shift + Text /
	>>  / Reveal	>>  / Preset+
	Play/Pause / Index	Play / Slow
	Stop / Size	Stop / Hold
	Stop / Size	Zoom / Size
	FAV	Fav / Marker / PC
	Aspect	+  Shift + Picture / Format
	File	Display / Media
	Delete	Eject / Surround

	Original	Replacement
	Zoom-	+  Shift + Down
	Zoom+	+  Shift + Up
	EPG	Guide / EPG / -/--
	DTV / Radio	TV/Radio /
	Rec	Rec / Rec Mode
	Subtitle	Subtitle / EQ

