



Original	Replacement	Original	Replacement
 TV Power	 Shift + Power	 Mute	 Mute / Dimmer
 TV Input	 Shift + AV / Input / RDS	 CH+ / PG+	 CH+ / Page+
 Power	 Power	 Vol-	 Vol-
 Guide	 Guide / EPG / -/--	 CH- / PG-	 CH- / Page-
 Menu	 Menu / Home	 R	 TV/Radio /
 Text	 Text / Goto	 R	 Shift + Green / APP /
 Aspect	 Picture / Format	 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 Subtitle	 Subtitle / EQ	 <<	 << / Tune-
 Back	 Back / Return	 Play	 Play / Slow
 Up	 Up	 >>	 >> / Tune+
 Info	 Info / Angle	 I< Replay	 I<< / Preset-
 Left	 Left	 >I Skip	 >>I / Preset+
 OK	 OK	 Source	 AV / Input / RDS
 Right	 Right	 1	 1
 Down	 Down	 2	 2
 Vol+	 Vol+	 3	 3





Original	Replacement	Original	Replacement
 4 GHI	 4 VIDEO		
 5 JKL	 5 TAPE		
 6 MNO	 6 TUNER		
 7 PQRS	 7 AUX - HDD		
 8 TUV	 8 USB		
 9 WXYZ	 9 BLUETOOTH		
 X CLEAR	 CLEAR EXIT CANCEL		Exit / Cancel / Clear
 0	 0 HDMI - BAT		
 ✓ ENTER	 PC FAV MARKER		Fav / Marker / PC
 Red	 NETFLIX SEARCH		Red / Netflix / Search
 Green	 APP REPEAT		Green / APP / Repeat
 Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
 Blue	 Prime Video RANDOM		Blue / Prime Video / Random

