


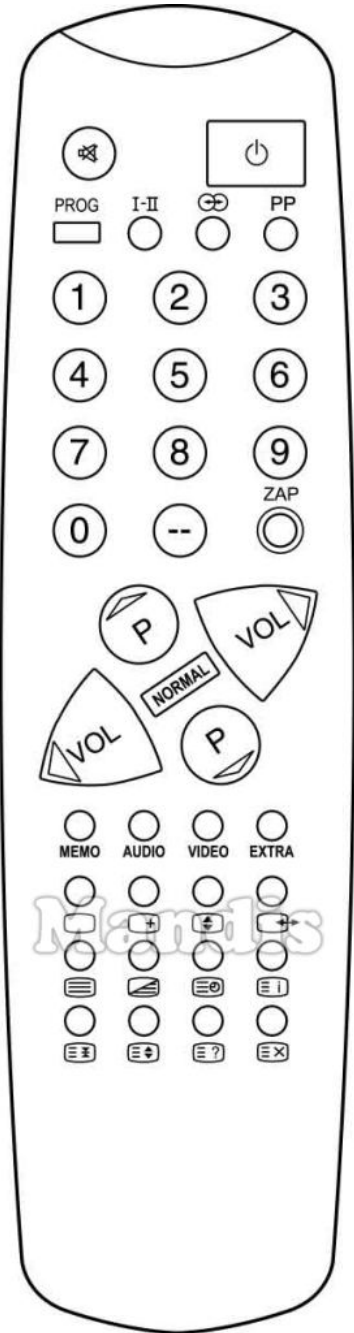

Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --
	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[]		Display / Media
	[+]		Stop / Hold





	Original	Replacement		Original	Replacement
	[◆]	OPT-TOOLS SETUP	Setup / OPT /		
	[] ↔	TOP MENU D.MENU	D.Menu / Top		
	[=]	GOTO TEXT	Text / Goto		
	[/ =]	SHIFT + GOTO TEXT	Shift + Text /		
	[= ⊕]	EQ SUBTITLE	Subtitle / EQ		
	[=]	ANGLE INFO	Info / Angle		
	[=]	STEP-FREEZE II	Pause / Step / Freeze		
	[= ◆]	SIZE ZOOM	Zoom / Size		
	[= ?]	RDS AV INPUT	AV / Input / RDS		
	[= X]	CLEAR EXIT	Exit / Cancel / Clear		

