






















 





 

 






Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 RETURN BACK
 Audio	 SOUND DUAL
 P.M.	 HOME SMART

Original	Replacement
 Info	 DISPLAY INFO
 Input	 TIMER AV
 Up / CH+	 Up
 Up / CH+	 + CH
 Down / CH-	 Down
 Down / CH-	 CH -
 Right / Vol+ / Enter	 Right
 Left / Vol-	 Left
 Left / Vol-	 VOL -
 Right / Vol+ / Enter	 + VOL
 Right / Vol+ / Enter	 OK
 Menu	 TOP MENU MENU
 Page+	 >>I
 Page-	 I<<
 Display	 SHIFT + DISPLAY INFO
 Exit	 CLEAR EXIT
 Red	 A





Original		Replacement		Original		Replacement	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Size		Eject				
	Stop		Stop				
	Reveal		TV/R				
	Index		Options				
	4:3 / 16:9		Format				
	C.Lock		Media				
	Sub.PG		Subt				
	On/Mix/Off		Text				

