


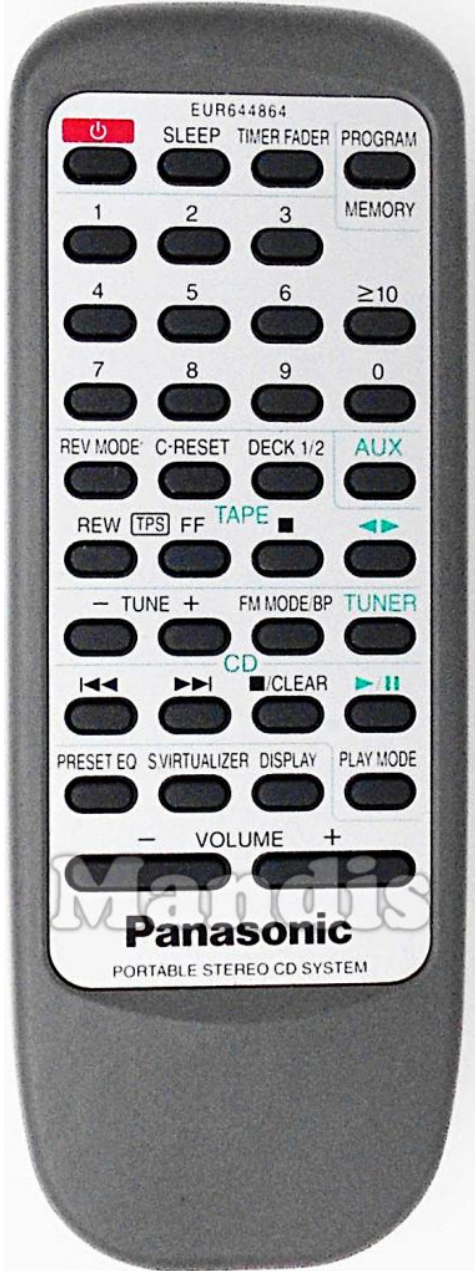

Original	Replacement
Power	Power
Sleep	Sleep / Timer
Timer Fader	Shift + Sleep / Timer
Program	Shift + TV/Radio / Program
1	1
2	2
3	3
4	4
5	5
6	6
≥10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
TAPE Rev Mode	Shift + 5
TAPE C-Reset	Text / Goto

Original	Replacement
TAPE Deck 1/2	Shift + 1
AUX	Shift + 7
TAPE REW	Zoom / Size
TAPE FF	Audio / Lang I/II
TAPE Stop	Stop / Hold
TAPE Play / Rev. Play	Setup / OPT /
TAPE Play / Rev. Play	Shift + Play /
TUNER Tune-	CH- / Page-
TUNER Tune+	CH+ / Page+
TUNER FM	TV/Radio /
TUNER	Shift + 6
TUNER	Shift + 9
CD I<<	Shift + I<< / Preset-
CD I<<	I<< / Preset-
CD >>I	>>I / Preset+
CD >>I	Shift + >>I / Preset+
CD Stop/Clear	Pause / Step / Freeze





Original	Replacement	Original	Replacement
 CD Play/Pause	 Play / Slow		
 CD Play/Pause	 Shift + Pause / Step /		
 CD Play/Pause	 D.Menu / Top		
 Preset EQ	 Subtitle / EQ		
 S. Virtualizer	 Sound / Title		
 Display	 Display / Media		
 Display	 Shift + Display / Media		
 CD Play Mode	 Menu / Home		
 Volume-	 Vol-		
 Volume+	 Vol+		

Original	Replacement	Original	Replacement

