



	Original	Replacement		Original	Replacement
	Power On	Power		Vol-	Vol -
	Power Off	Shift + Power		Mute	Mute
	1	1		FRQ Direct	Play
	2	2		Tune	I<<
	3	3		Preset	>>I
	4	4		FM Mono	Pause
	5	5		Band	Stop
	6	6		Center	Yellow
	7	7		Swoofers	Red
	8	8		Surround	Green
	9	9		Menu	Menu
	0	0		Up	Up
	Ten/+10	Guide		Down	Down
	Memory	Pre Ch		+/Forward	Right
	CH+	Ch +		-/Back	Left
	CH-	Ch -		Enter	Ok
	Vol+	Vol +		CD	Shift + 1





 

 
















 









 







 



 



 

 
 


 





 


 


 
 



Original	Replacement	Original	Replacement
Tun	Shift + 2	7 CH	Subt
Tape	Shift + 3	Display	Info
EXT	Shift + 4	Tape 2	Exit
V1/DVD	Shift + 5	Phono	Back
V2	Shift + 6	Tone	Text
V3	Shift + 7	D-SLT	D. Menu
V4	Shift + 8	Scan	Shift + Play
V5	Shift + 9	PTY	<<
EQ	Smart	P-Tun	>>
DYN	Media	TP	Shift + Pause
Rec	Rec	TA	Shift + Stop
Zone	Shift + Smart	Aspect	Format
Sur+	Shift + Media	Disp	Shift + Info
2 CH	List	PIP	Sleep
PL C	Options	POP	TV/R
PL M	3D	Output	AV
5 CH	Dual	Power	Blue







Original		Replacement		Original		Replacement	
	Power On		Power		Play		Play
	Power Off		Shift + Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Pause		Pause
	3		3		Stop		Stop
	4		4		Menu		Menu
	5		5		Up		Up
	6		6		OSD		Back
	7		7		Down		Down
	8		8		-/Back		Left
	9		9		-/Back		<<
	0		0		+ /Forward		Right
	Ten (+10)		Guide		+ /Forward		>>
	Clear (X)		Exit		Enter		Ok
	Vol+		Vol +		Search-		Ch -
	Vol-		Vol -		Search+		Ch +
	Mute		Mute		Random (DYN)		TV/R





 











 




 











 


 





 
 

 

 

 
 
 
 


Original	Replacement	Original	Replacement
DISC3 REC PAL (Rec)	PICTURE FORMAT Format	GOTO TP TV/VCR Goto	SHIFT + Left Arrow Shift + Left
DISC4 ZONE HD Mode	ECO 3D 3D	POWER Power	D Blue
DISC5 SUR+ DIM (SUR+)	TIMER AV AV		
PROG 2CH Prog (2CH)	PROG SLEEP Sleep		
RANDOM PL C Screen (PL C)	HOME SMART Smart		
REPEAT PL M Title (PL M)	APP MEDIA Media		
DISC- 5SCH Prog-Scan	SETTINGS OPT Options		
DISC+ 7CH OPEN Open (7CH)	ZOOM Eject		
DISPLAY DISP Display	DISPLAY INFO Info		
AUDIO TAPE2 Audio	SOUND DUAL Dual		
ANGLE PHONO Angle	DISC NAV LIST List		
SBTITLE TONE Subtitle	AD SUBT Subt		
ZOOM D-SLT Zoom	SHIFT + ZOOM Eject		
RESUME SCAN INPUT 1 Resume	SHIFT + Right Arrow Shift + Right		
REPEAT PTY INPUT 2 Repeat	REPEAT TEXT Text		
A - B P-TUN INPUT 3 A-B	E-MANUAL D.MENU D. Menu		
SLOW TA RECORD Slow	SHIFT + PLAY MODE Shift + Play		







Original		Replacement		Original		Replacement	
	Power On		Power		I<<		I<<
	Power Off		Shift + Power		>>I		>>I
	1		1		Pause		Pause
	2		2		Stop		Stop
	3		3		Open (ENT)		Ok
	4		4		Open (ENT)		Eject
	5		5		Search-		Ch -
	6		6		Search+		Ch +
	7		7		Disc 1		Shift + 1
	8		8		Disc 2		Shift + 2
	9		9		Disc 3		Shift + 3
	0		0		Disc 4		Shift + 4
	TEN (+10)		Guide		Disc 5		Shift + 5
	Vol+		Vol +		Program (2CH)		Sleep
	Vol-		Vol -		Random (PL C)		TV/R
	Mute		Mute		Repeat (PL M)		Text
	Play		Play		Disc+ (7CH)		>>





	Original	Replacement	Original	Replacement
	Display (DISP)			
	Scan			
	Time (PTY)			
	A-B (P-Tun)			
	Review (TP)			
	Clear (TA)			
	Power			

