
 
 


 

 










 




 


 







 



 


Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Stop	 Stop	Menu Down	 Down
Slow Up	 Ch +	Progr.	 +  Shift + Sleep
Auto/Track	 Red	Volume+	 Vol +
Pause	 Pause	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Top Menu	 +  Shift + Menu
Title	 List	Prev.	 <<
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Input Source	 Shift + AV
9	 9	Lang	 Shift + Dual
+10	 Guide	Setup	 Options
0	 0	Audio	 Dual
Pbc	 Green	Open/Close	 Eject
C/CH	 Pre Ch	3D	 3D
Record	 Rec		
Np	 Yellow		
Timer	 Sleep		
Video	 Format		
Rewind	 <<		
Digest	 Media		
Syst.Preset	 D. Menu		
Play	 Play		
Mode	 Smart		
Random	 TV/R		
F.Forward	 >>		

