






 

 

 

 







 

 



 



 
 
 















 
 


 

 

 

 




















Original		Replacement		Original		Replacement	
	Standby		Power		Timer		AV
	Teletext		Text		Menu		Menu
	Info		Info		OK		Ok
	Transp.		D. Menu		Up		Up
	Clock		Options		Left		Left
	Clear		Exit		Right		Right
	1		1		Down		Down
	2		2		→→		Smart
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Mute		Mute
	6		6		P<P		Pre Ch
	7		7		P+		Ch +
	8		8		P-		Ch -
	9		9		Play		Play
	0		0		<<		<<
	SV/V+		Media		Stop		Stop





Original	Replacement	Original	Replacement
 >>	 >>		
 >I / Index	 >>I		
 Record / OTR	 Rec		
 >I< Still	 Pause		

Original	Replacement

