



Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide
	Mute		Mute		Menu		Menu
	Red		Red		Info		Info
	Green		Green		Up		Up
	Yellow		Yellow		Left		Left
	Blue		Blue		OK		Ok
	<<		<<		Right		Right
	>>		>>		Down		Down
	l<<		l<<		FAV		Pre Ch
	>>l		>>l		Exit		Exit
	Play		Play		Vol+		Vol +
	Pause		Pause		Vol-		Vol -
	Stop		Stop		Rec		Rec
	Media		Media		USB		Smart
	Subtitle		Subt		USB		AV
	TTX		Text		CH+		Ch +
	Audio		Dual		CH-		Ch -





Original		Replacement		Original	Replacement
1	1	1	1		
2	2	2	2		
3	3	3	3		
4	4	4	4		
5	5	5	5		
6	6	6	6		
7	7	7	7		
8	8	8	8		
9	9	9	9		
0	0	0	0		
BACK	Back	RETURN BACK	Back		
TV/RADIO	TV/Radio	SEARCH TV/R	TV/R		

