



Original	Replacement
TV Power	Shift + Power
STB POWER	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
LAST	Fav / Marker / PC
GREEN / SLEEP	Green / APP / Repeat
GREEN / SLEEP	Sleep / Timer
YELLOW /	Yellow / YouTube / Repeat
YELLOW /	Audio / Lang I/II

AUDIO

 

Original	Replacement
BLUE / LIST	Blue / Prime Video / Random
BLUE / LIST	Smart / List
RED / IP	Red / Netflix / Search
OPTION	Setup / OPT /
UP	Up
INFO	Info / Angle
LEFT	Left
OK	OK
RIGHT	Right
Menu	Menu / Home
DOWN	Down
BACK	Back / Return
FAV	Shift + Fav / Marker / PC
GUIDE	Guide / EPG / -/-
REC	Rec / Rec Mode
STOP	Stop / Hold
TIME SHIFT	D.Menu / Top

Menu





Original	Replacement
 MEDIA	 Display / Media
 REW	 << / Tune-
 PLAY / PAUSE	 Play / Slow
 PLAY / PAUSE	 Pause / Step / Freeze
 FWD	 >> / Tune+
 VOL+	 Vol+
 PAGE UP	 Shift + CH+ /
 PR+	 CH+ / Page+
 VOL-	 Vol-
 PAGE DOWN	 Shift + CH- /
 PR-	 CH- / Page-
 ZOOM	 Zoom / Size
 V. F	 Subtitle / EQ
 TEXT	 Text / Goto
 TV/Radio	 TV/Radio /
 PiP	 Picture / Format
 MUTE	 Mute / Dimmer

Original	Replacement
 TIMER	 Shift + Sleep / Timer

