






 

 

 





 

 

 



 
 
 
 


 
 
 

 



 



 

 

 
 
 
 


 
 
 


 

 
 


 

 
 





 

 








 

 

 
 

 
 
 



 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		Timer Rec		AV
	Eject		Shift + Eject		Rec OTR		Rec
	Open/Close		Eject		Marker/Tape		Options
	Display Call		Info		Jump/Zero Return		Pre Ch
	1		1		Clock/Counter		Yellow
	2		2		Counter Reset		Green
	3		3		Tv/VCR		TV/R
	4		4		VCR		Smart
	5		5		DVD		Media
	6		6		Setup Menu		Menu
	7		7		DVD Menu		D. Menu
	8		8		Up		Up
	9		9		Down		Down
	0/AV		0		Right/TRK+		Right
	Channel+		Ch +		Left/TRK-		Left
	Channel-		Ch -		Enter/Select		Ok
	Showview/Progra		Guide		Title		Red





Original		Replacement		Original		Replacement	
	Return		Back				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	I<</- Index/Skip		I<<				
	<<		<<				
	>>		>>				
	>>I/Skip/Index +		>>I				
	I>/Slow		Blue				
	Cancel		Exit				
	Repeat A-B		Text				
	Zoom		3D				
	Angle		List				
	Play Mode		Shift + Play				
	Subtitle		Subt				
	Audio		Dual				

