 


| Original | Replacement | Original | Replacement |
|---|--|---|--|
|  Power |  Power |  Exit |  Exit |
|  Sleep |  Sleep |  Up |  Up |
|  Menu |  Menu |  Left |  Left |
|  TXT |  Text |  OK |  Ok |
|  TV |  TV/R |  Right |  Right |
|  HDD |  AV |  Down |  Down |
|  Timer |  Shift + AV |  Info |  Info |
|  Rew |  << |  Vol+ |  Vol + |
|  Play |  Play |  Vol- |  Vol - |
|  FFwd |  >> |  Mute |  Mute |
|  Record |  Rec |  Fav |  Shift + Pre Ch |
|  Pause |  Pause |  HD |  D. Menu |
|  Stop |  Stop |  CH+ |  Ch + |
|  Card |  Shift + Media |  CH- |  Ch - |
|  Pvr set |  Shift + Smart |  Subt |  Subt |
|  Live TV |  Smart |  Media |  Media |
|  Back |  Back |  1 |  1 |



