




























Original	Replacement
	 Power
	 Smart / List
	 Sleep / Timer
	 Mute / Dimmer
	 Vol+
	 AV / Input / RDS
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 CH- / Page-
	 TV/Radio /
	 Eject / Surround
	 Audio / Lang I/II
	 Play / Slow
	 Pause / Step / Freeze
	 Display / Media
	 Stop / Hold

Original	Replacement
	 Subtitle / EQ
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 << / Tune-
	 Left
	 OK
	 Right
	 Fav / Marker / PC
	 >>I / Preset+
	 Down
	 >> / Tune+
	 Guide / EPG / -/-
	 I<< / Preset-
	 Text / Goto
	 Info / Angle
	 Red / Netflix / Search





Original	Replacement	Original	Replacement
Red/Dvd Menu	D.Menu / Top	0	0
Green/Lang	Green / APP / Repeat	Return	Back / Return
Green/Lang	+  Shift + Audio / Lang I/II		
Yellow/Repeat	Yellow / YouTube / Repeat		
Yellow/Repeat	+  Shift + Green / APP /		
Blue/Dvd Setup	Blue / Prime Video / Random		
Blue/Dvd Setup	Setup / OPT /		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
-/--	+  Shift + Guide / EPG / -/--		

Original	Replacement
0	0
Return	Back / Return

