



Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 TV Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 5	 Volume-	 Vol-
 AUX1	 Shift + 7	 Eco	 D.Menu / Top
 Tuner	 Shift + 6	 Info	 Info / Angle
 Bluetooth	 Shift + 9	 Up	 Up
 Game	 Shift + Fav / Marker / PC	 Option	 Shift + Setup / OPT / Tools
 AUX2	 Shift + Guide / EPG / -/-	 Left	 Left
 Phono	 Shift + 4	 Right	 Right
 USB	 Shift + 8	 Back	 Back / Return
 Media Player	 Display / Media	 Down	 Down
 CD	 Shift + 3	 Setup	 Setup / OPT /
 Online Music	 Smart / List	 Home	 Menu / Home
 Internet Radio	 Shift + Smart / List	 Stop	 Stop / Hold
 CH/Page+	 CH+ / Page+	 Pause	 Pause / Step / Freeze





 
Original	Replacement	Original	Replacement
	Play / Slow		3
	I<< / Preset-		4
	Shift + I<< /		5
	>>I / Preset+		6
	Shift + >>I /		7
	<< / Tune-		8
	>> / Tune+		9
	Shift + Red / Netflix /		0
	Shift + Green / APP /		OK
	Shift + Yellow / YouTube /		
	Shift + Blue / Prime		
	Green / APP / Repeat		
	Red / Netflix / Search		
	Blue / Prime Video / Random		
	Yellow / YouTube / Repeat		
	1		
	2		

Original	Replacement	Original	Replacement
	3		4
	5		6
	7		8
	9		0
	0		OK







Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Replacement
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+



 


Original	Replacement	Original	Replacement
>> / Tune+	+  Shift + >> /	Enter	OK
<<	<< / Tune-		
>>	>> / Tune+		
Smart Select 1	Red / Netflix / Search		
Smart Select 2	Green / APP / Repeat		
Smart Select 3	Yellow / YouTube / Repeat		
Smart Select 4	Blue / Prime Video / Random		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		







Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Replacement
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Replacement	Original	Replacement
 >>/Tune+	 +  Shift + >> /	 Enter	 OK
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Smart Select 1	 Red / Netflix / Search		
 Smart Select 2	 Green / APP / Repeat		
 Smart Select 3	 Yellow / YouTube / Repeat		
 Smart Select 4	 Blue / Prime Video / Random		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		

