





















 




Original	Replacement	Original	Replacement
 Power	 Power	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 [G]	 Guide
 4	 4	 i	 Info
 5	 5	 Back	 Back
 6	 6	 Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Lang	 Dual	 OK	 Ok
 TXT	 Text	 Netflix	 Media
 Vol+	 Vol +	 YouTube	 Shift + Media
 Vol-	 Vol -	 *1	 Format
 Mute	 Mute	 *2	 3D
 Source	 AV	 Red	 Red

Original	Replacement	Original	Replacement
 P+	 Ch +	 TV	 AUX
 P-	 Ch -	 DVD	 REC MODE
 Home	 Smart	 PLAY MODE	 MUTE
 [G]	 Guide	 SAT	 SHIFT
 i	 Info	 AUX	 TV
 Back	 Back	 DUAL	 SUBT
 Exit	 Exit	 AD	 OPT
 Up	 Up	 SETTINGS	 DISC NAV
 Down	 Down	 SOUND	 PICTURE
 Right	 Right	 ECHO	 SLEEP
 Left	 Left	 REPEAT	 TV/R
 OK	 Ok	 ZOOM	 FORMAT
 Netflix	 Media	 TIMER	 3D
 YouTube	 Shift + Media	 D.MENU	 TEXT
 *1	 Format	 RETURN	 BACK
 *2	 3D	 CLEAR	 EXIT
 Red	 Red	 OK	 MENU
		 UP	 INFO
		 DOWN	 LEFT
		 RIGHT	 RIGHT
		 HOME	 SMART
		 APP	 CH -
		 MEDIA	 VOL +
		 Shift + Media	 VOL -
		 Format	 1
		 3D	 2
		 Red	 3





Original	Replacement	Original	Replacement
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

