
 
 



 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 Guide	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu

Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 Guide	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu





Original	Replacement
Green / DVD	Green
Green / DVD	D. Menu
Yellow / P.Size	Yellow
Blue / Info	Blue
Blue / Info	Info
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Open / Close	Eject
Rec / Return	Rec
Rec / Return	Back
Pre-CH	Pre Ch
Step	Shift + Pause
Sleep	Sleep
Show View	Media

Original	Replacement
Clear	Exit
Angle	3D
Repeat	Shift + Text
SP/LP	TV/R
Crystal PB	Options
Zoom	Shift + Eject
Subtitle	Subt

