



Original	Replacement	Original	Replacement
	Power		Power
	Night Mode		Rec
	Tuner Menu		Menu
	Dynamic Bass		List
	Sleep		Sleep
	Sound Field-		Ch -
	Sound Field+		Ch +
	Muting		Mute
	DVD Menu		D. Menu
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
>10 button icon"/>	>10		Guide
	Function		Smart
	Display		Info
	DVD Setup		Options
	Subtitle		Subt
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Tv/Video		TV/R





Original		Replacement		Original		Replacement	
	Dimmer		Format				
	Pause		Pause				
	Play/Select		Play				
	Stop		Stop				
	<</Tuning-/<I		<<				
	Tuning+/Slow		>>				
	>>I/Preset+		>>I				
	I<</Preset-		I<<				
	Audio		Dual				
	Repeat		Text				
	DVD Display		Media				
	Enter		Pre Ch				
	DVD Top Menu		Shift + Menu				
	Band		3D				
	Angle		Green				
	Play Mode		Shift + Play				



