




















 

 

 



 









 


 




 





















 














 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC

Original	Replacement
 Vol+	 Vol+
 MTS I/II	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sub-T	 Subtitle / EQ
 CH-	 CH- / Page-
 Aspect	 Shift + Picture / Format
 Freeze	 Shift + Pause / Step /
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Replacement	Original	Replacement
 Exit	 Exit / Cancel / Clear	 List	 Smart / List
 Red	 Red / Netflix / Search	 T.Shift	 TV/Radio /
 Green	 Green / APP / Repeat	 USB	 Shift + 8
 Yellow	 Yellow / YouTube / Repeat	 EPG	 Guide / EPG / -/--
 Blue	 Blue / Prime Video / Random		
 << / Text/CC	 << / Tune-		
 << / Text/CC	 Text / Goto		
 Play/Pause /	 Play / Slow		
 Play/Pause /	 Pause / Step / Freeze		
 >> / Reveal	 >> / Tune+		
 I<< / Hold	 I<< / Preset-		
 I<< / Hold	 Shift + Stop /		
 >>I / Size	 >>I / Preset+		
 >>I / Size	 Zoom / Size		
 Stop / Index	 Stop / Hold		
 Root	 Info / Angle		
 Repeat	 Shift + Green / APP / Repeat		

